

BikeSpark

AUTO-SENSING REAR LIGHT

User Information of BikeSpark BKS-G4 Auto-sensing Rear Light

Hi! Thank you for choosing BikeSpark Auto-sensing Rear Lights.

1. Before loosening the nuts, pull down the snap-lock below the light to separate the light from the back cover.
2. Release the nuts in the paper sheet to remove the washers, bolts, and the back cover from the paper sheet.
3. Use a wrench firmly mounting the back cover on your carrier rack with the bolts, washers, and nuts.
4. Put the batteries, Alkaline batteries, in correct directions into the battery holder.
5. Press the power button to make sure the light works properly.
 - I. First pressing attempt will turn to the Mode 1: Daytime Brake Warning Mode. (The light only turns on while sensing the deceleration of the bike.)
 - II. Mode 2: Normal Lighting Mode
 - III. Model 3: Extended Lighting Mode
6. Lean the top of the light toward and below the hooks of the back cover, and slightly pull up the light, make sure the hooks are in pits, then press the light toward the back cover to secure it with the snap lock.
7. Press and hold to turn the light off for storage.

Please feel free to contact us at <http://www.bikespark.com.tw> for any questions. We are happy to hear from you.

Hope you enjoy the light as much as we do and have a safe ride.

BikeSpark Auto-sensing Rear Lights